



## Security Hanger Instructions

### Wood Security Hanger Installation Instructions

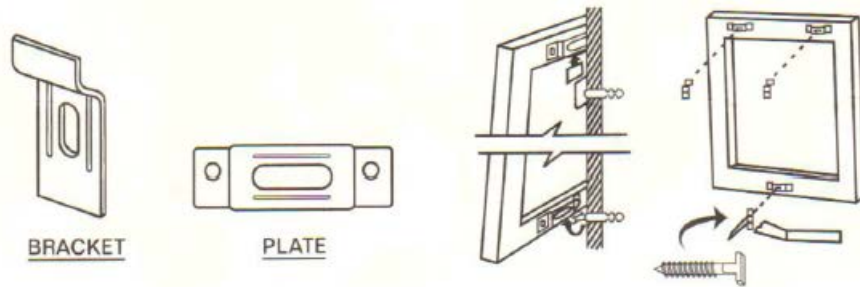

- Attach plates to frame using the #6 x 1/2" screws:
  - Mount two plates, evenly spaced, on the top of the frame – these will hang the frame on the wall.
  - Mount the third plate on the bottom rail of the frame – this will engage the locking t-screw.
- Position the frame on the wall and mark where brackets should be located based on location of plates at the top of the frame. TIP: The parallel ridges on the mounting plate will mark your bracket position when pressed into most wall surfaces.
- Attach the two brackets to the wall using the #10 x 1" screw and the #10 anchors.
  - Place frame on the brackets engaging the plates mounted on the back of the frame.
  - Make sure frame is level. Adjust brackets if required.
- Find the center of the bottom plate and mark corresponding spot on wall. TIP: Use the parallel ridges on the plate to mark spot on the wall or place a temporary screw into center of plate opening and use that to mark the wall. NOTE: This step must be done accurately or you'll have trouble engaging the locking screw. Temporarily remove picture from hanging brackets.
- Install T-Screw in wall using the #12 anchor. Tighten screw until it protrudes approximately 1/2" from wall. Align t-head parallel to floor and plate opening.
- Rehang picture on hanging brackets. T-Screw should fit into bottom mounting plate opening. Reach behind picture with locking wrench and turn 90° to lock. Your frame is now secure.

### Metal Security Hanger Installation Instructions

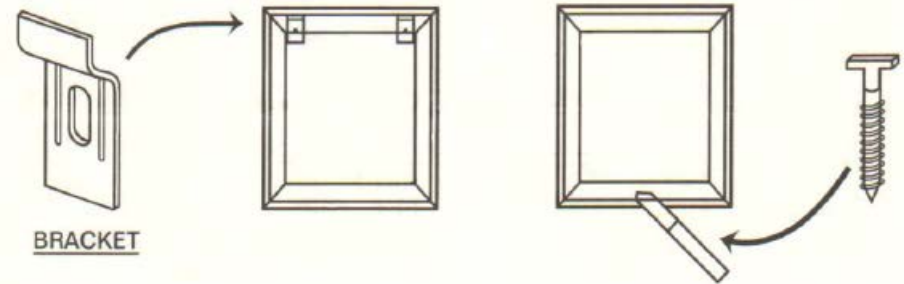

- Position the frame on the wall. Mark where brackets should be located so they are evenly spaced along the top aluminum extrusion of the frame.
- Attach the two brackets to the wall using the #10 x 1" screw and the #10 anchors.
  - Place frame on the brackets engaging top aluminum extrusion.
  - Make sure frame is level. Adjust brackets if required.
- Find the center of the bottom of the frame and mark a corresponding spot on wall that is exactly the center of the length and width of the bottom frame extrusion. NOTE: This step must be done accurately or you'll have trouble engaging the locking screw. Temporarily remove picture from hanging brackets.
- Install T-Screw in wall using the #12 anchor. Tighten screw until it protrudes approximately 1/2" from wall. Align t-head parallel to floor and bottom frame extrusion.
- Rehang picture on hanging brackets. T-Screw should fit into bottom frame extrusion. Reach behind picture with locking wrench and turn 90° to lock. Your frame is now secure.